

## Electrical System

Key to wiring diagram Europe/Export only (figure 126 and 127)


1. battery
2. starter motor
3. alternator
4. starter switch
5. safety — start switch
6. thermostat
7. line fuse 6 — 5 amp continuous
8. line fuse 7 — 12.5 amp continuous
9. fuse 1 — 10 amp continuous
10. fuse 2 — 10 amp continuous
11. fuse 3 — 5 amp continuous
12. fuse 4 — 5 amp continuous
13. fuse 5 — 10 amp continuous
14. combined light switch and horn button
15. RH front side light
16. RH front turn indicator light
17. LH front turn indicator light
18. LH front side light
19. LH rear red light
20. LH brake light
21. LH rear turn indicator
22. RH rear turn indicator
23. RH brake light
24. RH rear red light
25. number plate light
26. rear worklamp
27. light — engine temperature gauge
28. light — fuel gauge
29. light — tachometer gauge
30. light — transmission temperature gauge
31. light — speedometer
32. brake light switch
33. trailer socket
34. cigar lighter (optional)
35. turn indicator switch
36. transmitter — transmission suction filter restriction
37. fuel gauge
38. fuel level transmitter
39. engine temperature gauge
40. temperature transmitter

## Electrical System

41. transmission temperature gauge
42. transmission temperature transmitter
43. high beam warning light
44. engine oil pressure warning light
45. air filter/transmission filter blockage warning light
46. alternator charge light
47. engine oil pressure switch
48. air filter blockage switch
49. relay
50. horn
51. RH headlight — combined high/low beam
52. LH headlight — combined high/low beam
53. forward/reverse switch
54. solenoid — forward clutch
55. solenoid — reverse clutch
56. switch — transmission pressure
57. transmission pressure warning light

COLOUR CODE	
N	BROWN
U	BLUE
G	GREEN
W	WHITE
O	ORANGE
K	PINK
Y	YELLOW
P	PURPLE
S	GREY
R	RED
B	BLACK
L	LIGHT

Europe/Export — non-cab manual transmission models (figure 126)

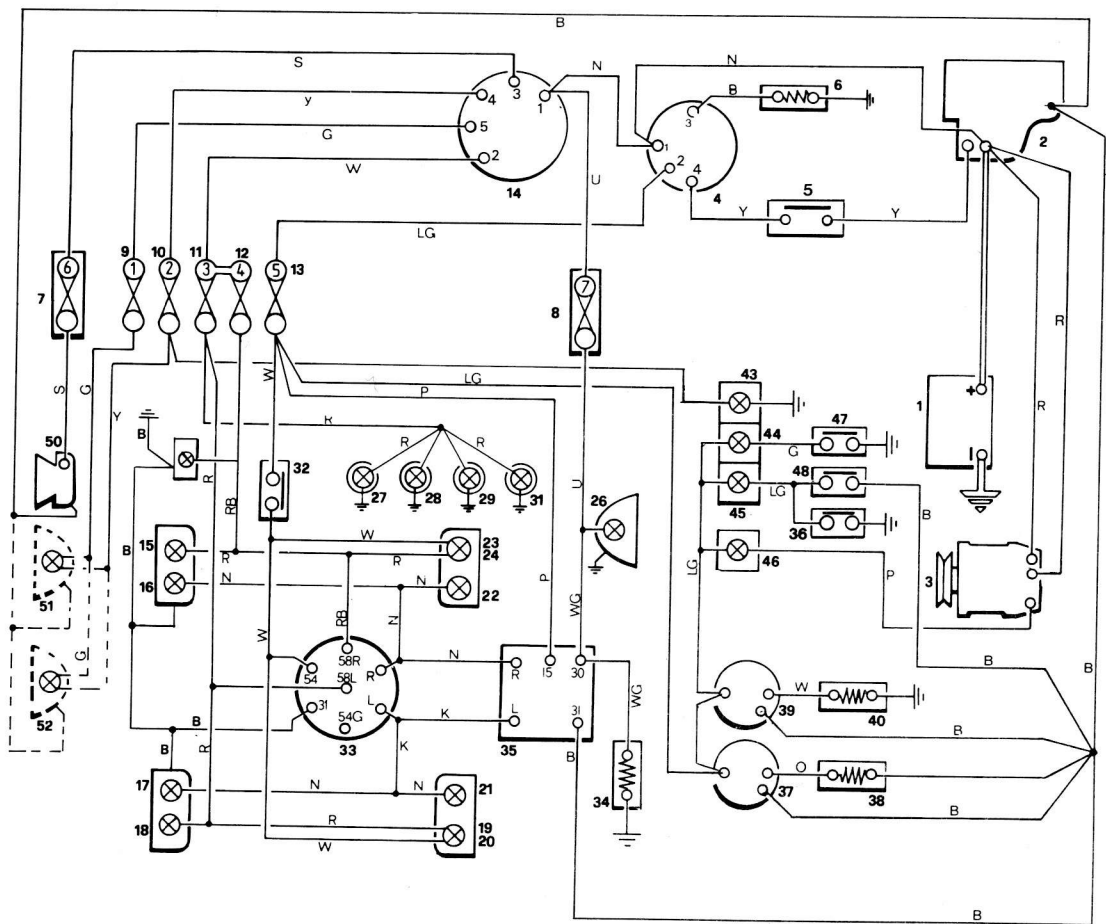

Europe/Export — non-cab Powershuttle models (figure 127)

